

RYDEEN[®]

find your road



Owner's Manual

BSS1LPB

Microwave Radar Blind Spots System

Version1.1

Table of Contents


I.....Items List.....	2
II.....Technical Specification.....	3
III.....Installation Diagram.....	3
IV.....Wire Connection Diagram.....	4
V.....Installation Guide.....	5
VI.....Alert Conditions.....	8
VII.....How does it Alert.....	8
VIII.....Troubleshooting.....	9
IX.....Technical Support Info.....	9
X.....Limited Warranty.....	9
XI.....To Obtain Warranty Service.....	10

I. Items list


Number	Item Name	Quantity	Picture
1	Main Unit	1PC	
2	Main Harness & Extension Cable	1SET	
3	BSS BAR with two sensors built inside	1PC	
4	LED Indicator	2PCS	
5	LED indicator housing	2PCS	
6	GPS Antenna	1PC	
7	Buzzer	1PC	
8	Velcro	4PCS	
9	Screws & L-tooling	3PCS screws & 1PC L-tooling	

Tools for installation: insulation tape; multi-meter; screwdriver; cleaning cloth; tape; M6 screws; L-tooling.


II. Technical specification

Detection range	52 degree (Horizontal)
Speed range	0.5mph---137mph
Speed accuracy	< 0.5mph
Speed Restriction	<ol style="list-style-type: none"> The GPS need to detect+20mph to activate the sensors. (there are 4 speed restriction option : 15 mph, 20 mph, 25 mph,30 mph.Default is 20mph). Pls see below (from 1-4 switch ,it could control 4 speed restriction) Switch 1 =15 mph, Switch 2=20 mph, Switch 3=25 mph, Switch 4=30 mph If no GPS signal is detected or satellites not found, the system will be activated at any speed 
Direction of movement	Approached or overtaken by vehicles
Detection range	Truck : 1ft-80ft Car : 1ft-65ft Motorcycle:1ft-50ft Pedestrian:1ft-45ft
Operating voltage	9---18V
Waterproof	Radars: IP67 / Cables: NOT waterproof
Working current	< 100mA
Working temperature	-20°C ~ + 70°C

III. Installation Diagram

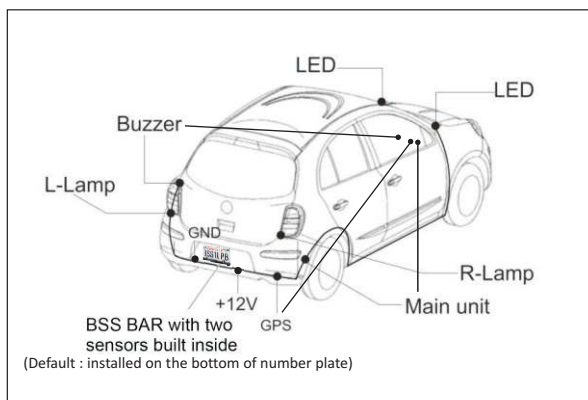

IV. wire connection Diagram

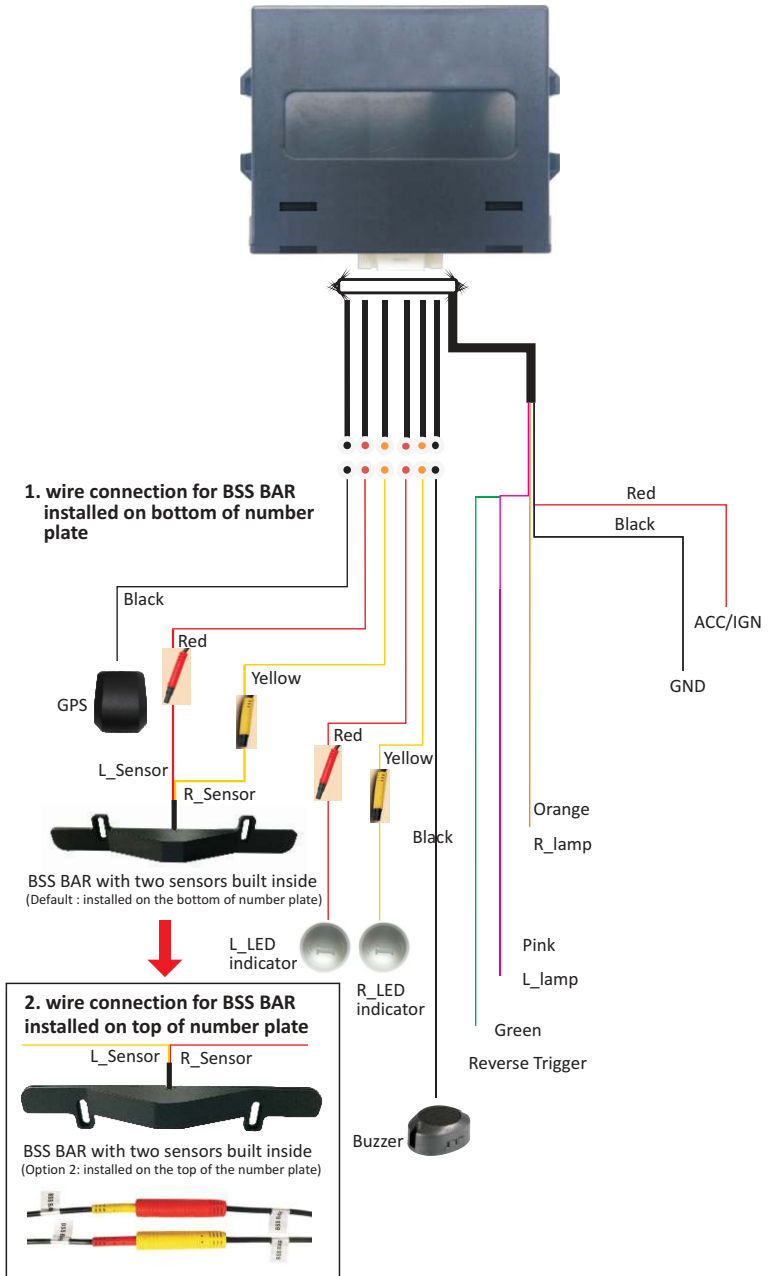

V. Installation Guide

1. BSS BAR installation

Two installation options available: the BSS bar could be installed on bottom or on top of the license plate. the default is installed on the bottom of license plate.

Step 1. install the BSS BAR on the bottom of the license plate



Fig.1

The BSS bar also could be installed on top of the license plate



Fig.2

2. Installation of the left/right turn signal.

Step 2. Using the voltage Multi-meter, locate the left and right isolated turn signal trigger wires behind the tail lamp. Once verified, connect the left and right signal wires of the BSS1LPB wire harness to the correct signal wires.



Fig.3



Fig.4



Fig.5

3. LED indicator installation:

Step 3. Place the LED indicators where it is visible for the driver. Ideally on the A-pillar.



Fig.6



Fig.7

4. Speaker location:

Step 4. While installing the speaker, make sure it is not obstructed by any panels inside the vehicle.



Fig.8

Step 5. Tuck the wires neatly to hide and prevent wire pinch.

Step 6. While installing the GPS, make sure it is not obstructed by any panels inside the vehicle.



Fig.9

VI. Alert conditions:

1. When the vehicle is on, the system would start detecting objects in the blind area in the lane next to and behind the vehicle 50 feet. (Fig.9)
2. When vehicles are approaching and their speed is faster than our own speed.

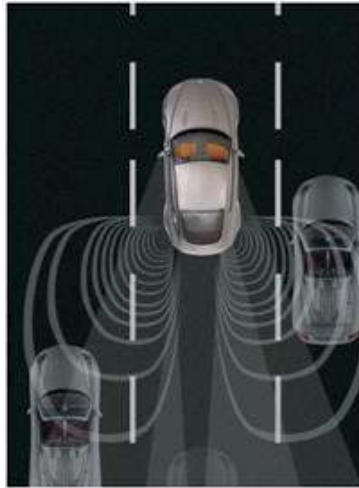


Fig.10

VII. How does it alert?

A. Blind detection on right side:

1. R-LED indicator will be activated and indicator will light up when there is an object approaching to the right side blind area of your vehicle at speed over 20 mph (see Fig.9).
2. If the right turn signal of your vehicle is triggered at the same time, the R-LED indicator will blink and the buzzer will be beeping as well (with the same frequency) at speed over 20 mph.

B. Blind detection on left side:

1. L-LED indicator will be activated and indicator will light up when there is an object approaching to the left side blind area of your vehicle at speed over 20 mph (see Fig.9).
2. If the left turn signal of your vehicle is triggered at the same time, the L-LED indicator will be blink and the buzzer will be beeping as well (with the same frequency) at speed over 20 mph.

C. The LED and buzzer will not light up (no activity) if there is no object approaching to the blind area of your vehicle.

D. When in reverse, the buzzer speaker will beep to give cross traffic warning to the driver and the LED will indicate the direction of incoming vehicles (or objects) are approaching.

VIII. Troubleshooting:

NO.	Issue	Reason	Solution
1	LED light does not work	Incorrect connection or pins not making contact	Check the harness and make sure connection is correct
		LED light is broken	Replace LED light
2	Opposite LED indicator	Microwave sensor or LED indicators are plugged in to the opposite connector	Make sure RED is driver side and YELLOW is passenger side.
3	Buzzer does not work	Wrong connection or pins not making contact	Check the harness and make sure connection is correct
		Defective buzzer speaker	Replace buzzer
4	Sensors or GPS does not work	Sensors or GPS module are covered by the metal bumper or other metal	Find the best location where the GPS antenna cannot be blocked by any metal
5	Unit does not work after GPS is connected	Blind spot system does not trigger the sensors if the speed is less than 20mph	Normal behavior in this case The GPS needs to detect +20mph to trigger the sensors

IX. Technical Support Contact Info.

- Telephone: 1-877-777-8811 (within USA only)
- Email: tech1@rydeenmobile.com
- Web Address: www.rydeenmobile.com

X. Limited Warranty

Rydeen North America Inc. (a manufacturer of "Rydeen" products) warrants this product (BSS1LPB) only to the original purchaser as described following:

Warranty Coverage

This warranty covers all defects in material and workmanship except as specified below.

1. Installation by anyone other than an authorized Rydeen Mobile Retailer may void the warranty.
2. Any products distributed outside of the USA by Rydeen North America Inc. (Rydeen) or which is not purchased in the USA or Canada.
3. Any product(s) which are purchased from an unauthorized retailer (in-store or online).

4. Any products in which the serial number label or the model number label are removed, torn, modified or replicated.
5. Any damage defects or malfunctions resulting from any of following:
 - a) When defect occurs during shipment of product (freight carrier's responsibility).
 - b) Installation or removal of product.
 - c) Accidents, act of nature, misuse, abuse, neglect, unauthorized product modification or failure to follow product owner's manual instructions.
 - d) Any repair or attempt to repair without RYDEEN authorization.
 - e) Any other cause which is not related to product defect.
 - f) Any cosmetic damages due to normal wear and tear.
 - g) Any consumable items (such as fuse or batteries).

If any problems develop with your Rydeen products during or after the Limited Warranty Period, or if you have any questions regarding the operation or installation of the product, you should contact your Rydeen retailer.

XI. To Obtain Warranty Service

If warranty service is required for your Rydeen product:

1. Please call Rydeen Customer Service Department at 1-877-777-8811 (within the USA only), Monday–Friday between 9:00 AM to 4:00 PM Pacific Standard time and obtain a Return Authorization Number (“RA”) Number.
2. Please pay for any shipping charge to Rydeen Customer Service Department.
Rydeen will pay the return shipping charge, if the repair or service was performed during the warranty period. Rydeen will ship freight collect (Recipient is responsible for shipping charge) if Rydeen determine the service was performed outside of warranty period or exclusions described above. Rydeen will not accept warranty service requests from outside of the U.S.A. even if product was purchased in the USA.
3. Please include a copy of your original purchase receipt including Rydeen Product model number, purchase date, retailer name/address and a RA Number whenever your product is sent for warranty service.
4. Shipping address for Rydeen Customer Service Department is following:

Rydeen North America Inc 2701 Plaza Del Amo, Unit 705, Torrance, California 90503, USA



Rydeen North America Inc. Dba
Rydeen Mobile Electronics
2701 Plaza Del Amo, Suite 705, Torrance, California 90503
Phone: 1-877-777-8811 Fax: 1-310-943-3778

Copyright © 2017 Rydeen North America Inc. All Rights Reserved.

RYDEEN[®] is a registered trademark of Rydeen North America Inc.

These materials are protected by copyright law and international treaties. Any unauthorized use, reproduction or distribution of these materials, or any portion herein, will result in severe civil and criminal penalties and fines. Violators will be prosecuted to the fullest extent of the law.